



For spare parts

- R545,213
- R545,113
- R545,112


refer to user manual



R540,40

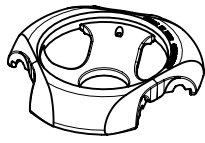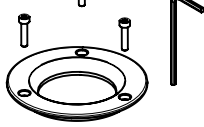


R545,01

 

R545,07

R545,112

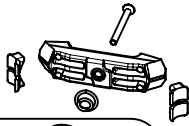

R545,02



R545,25
set of 6




R545,113



R545,02



R545,25
set of 6

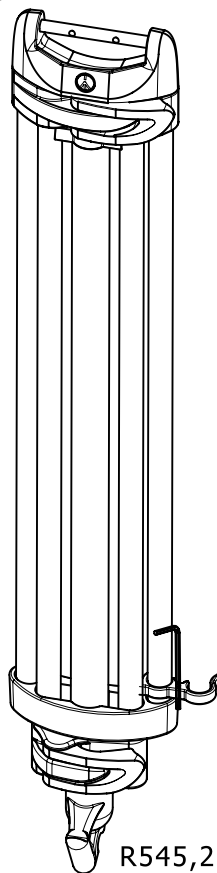



R545,214

R545,214L
set of 3
LASER.

R3,2336
set of 3

R545,22
set of 3

ART. MVTTWINMA
ART. MVTTWINMAUS

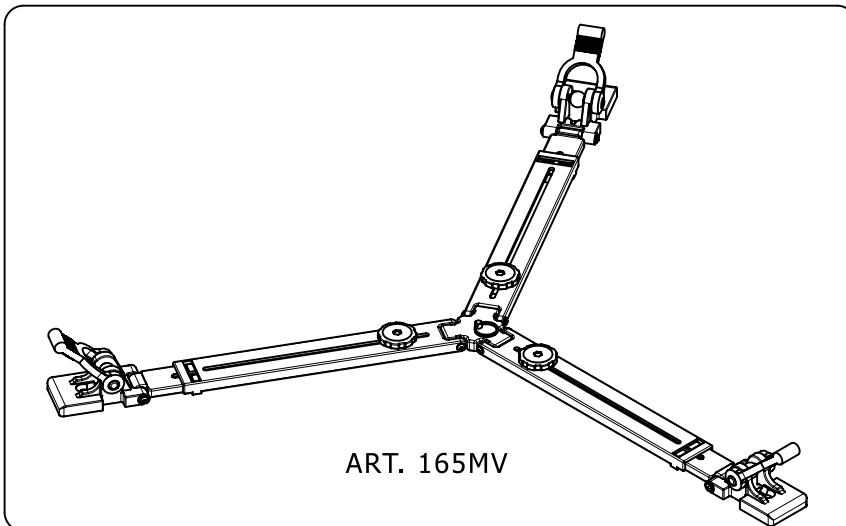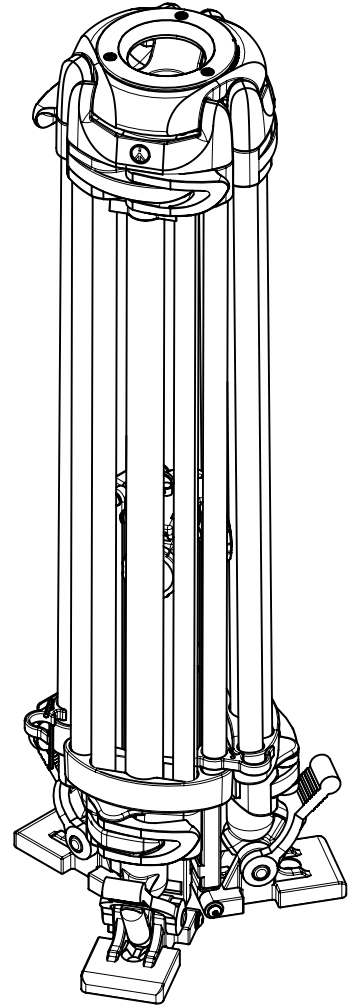

ART. 165MV

BOX

FOR MVTTWINMA see
RI,500,18,13 set of 4

FOR MVTTWIMAUS see
RI,500,18,14 set of 4